

SL01


Assembly instruction COMPLETE '40 GREEN DOORS '40 DOOR FRAME


opened inward

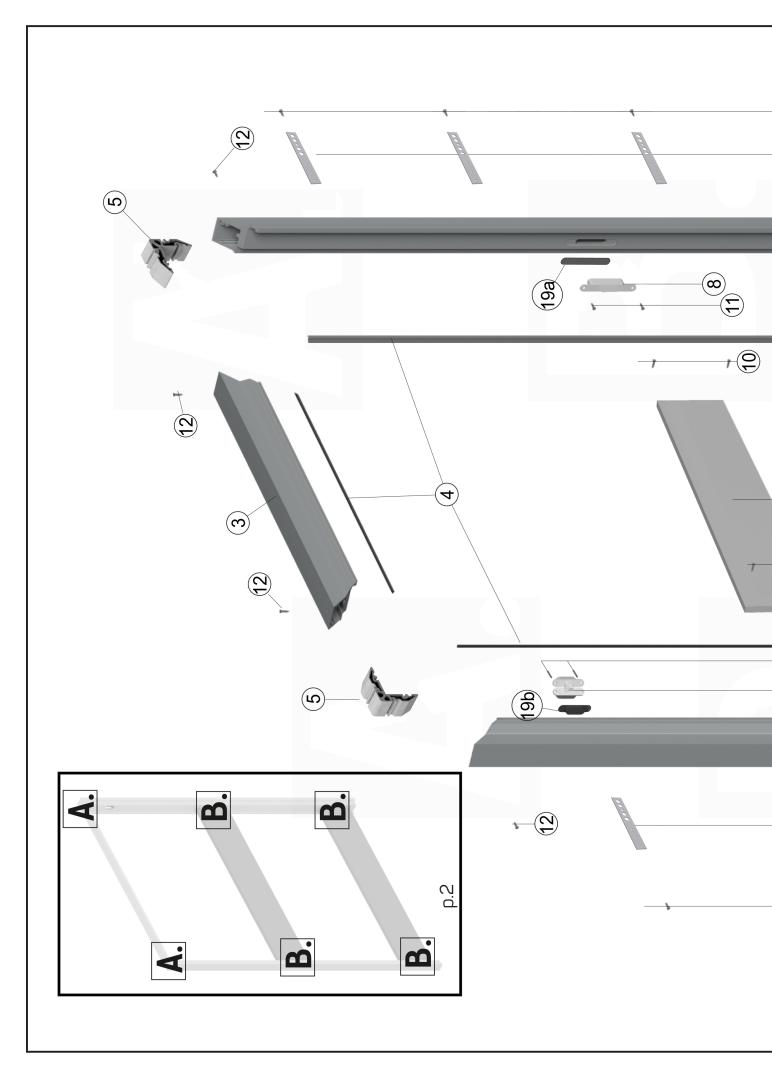


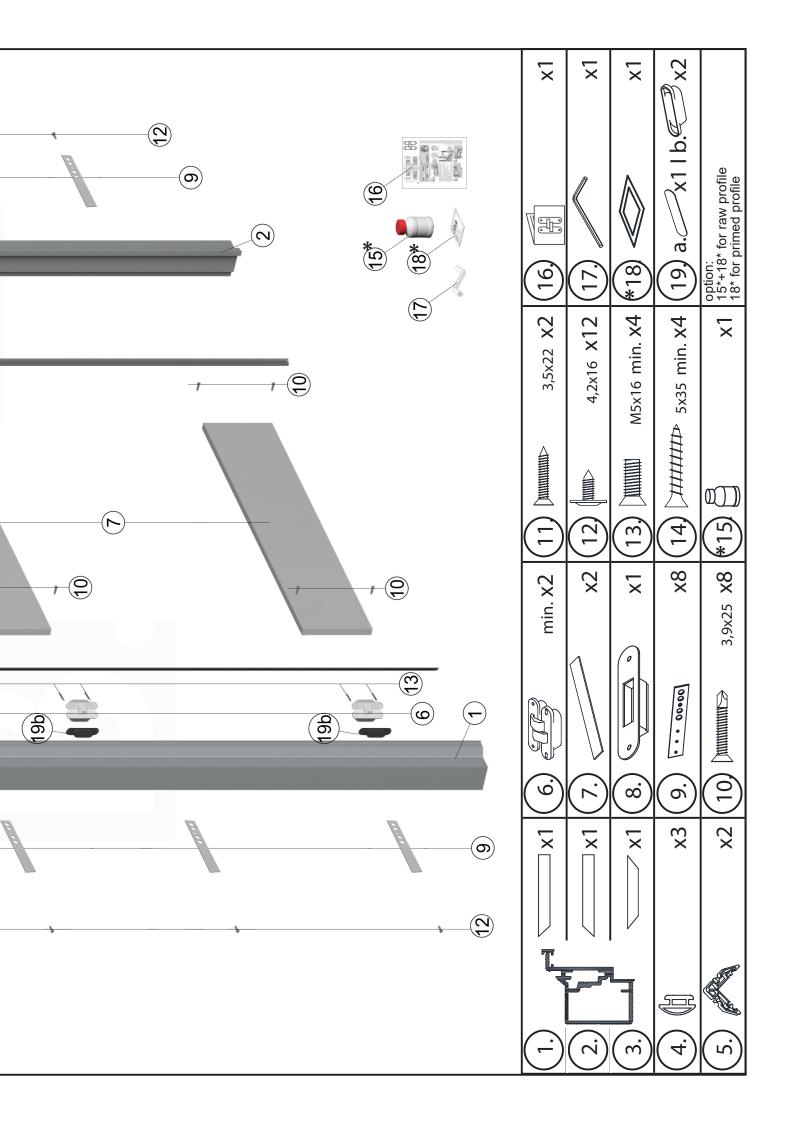





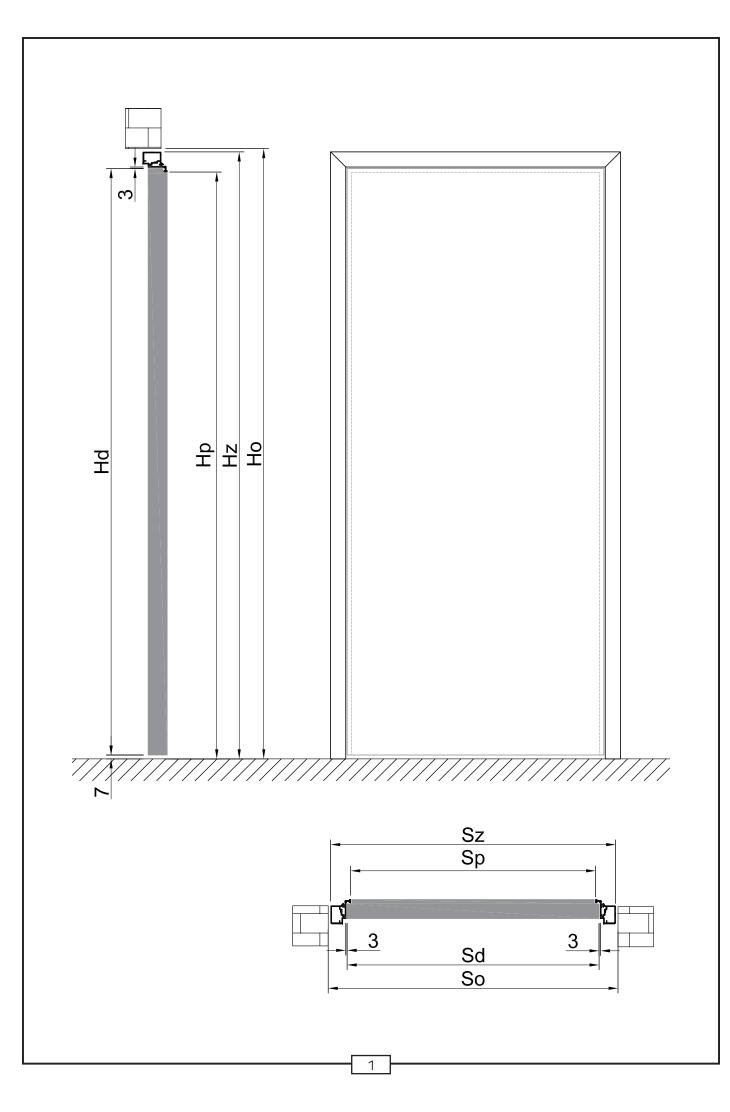


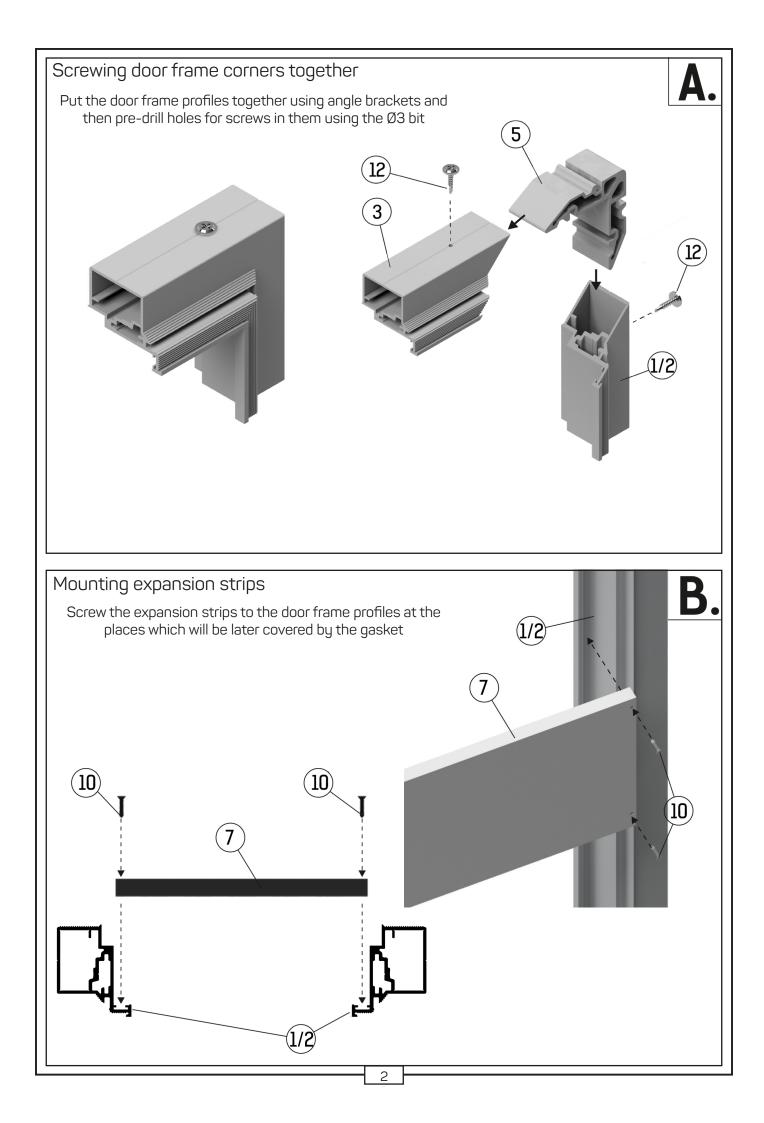


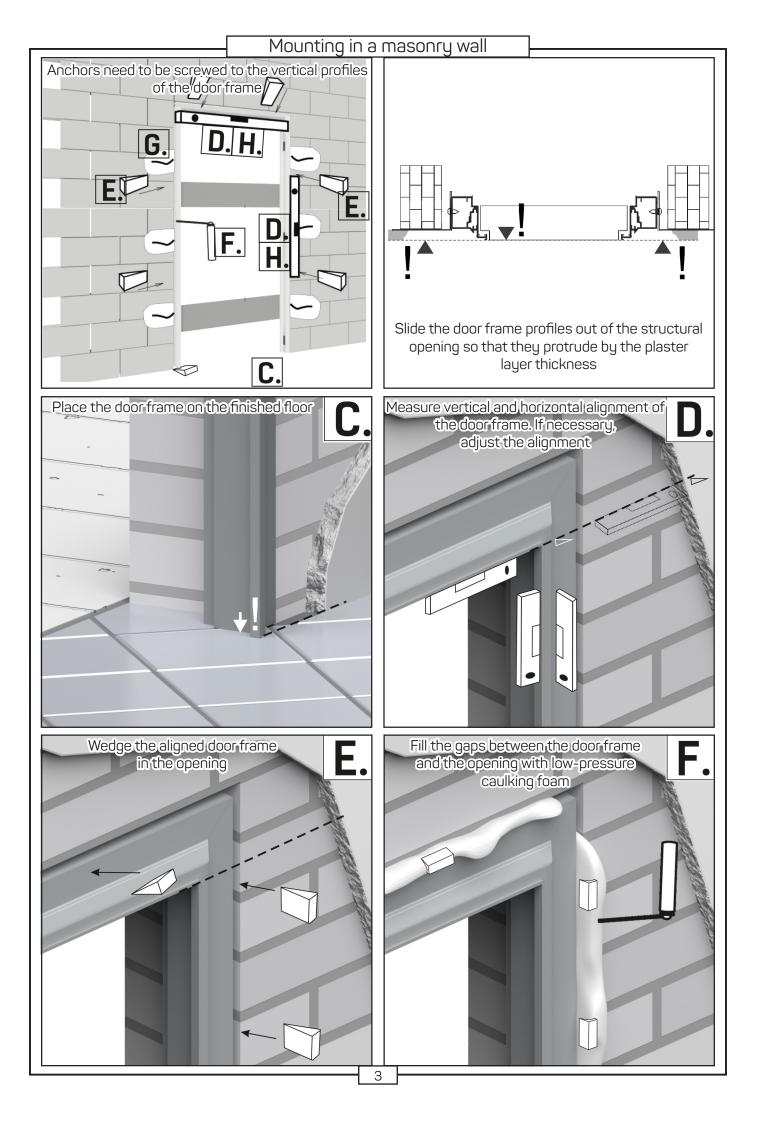


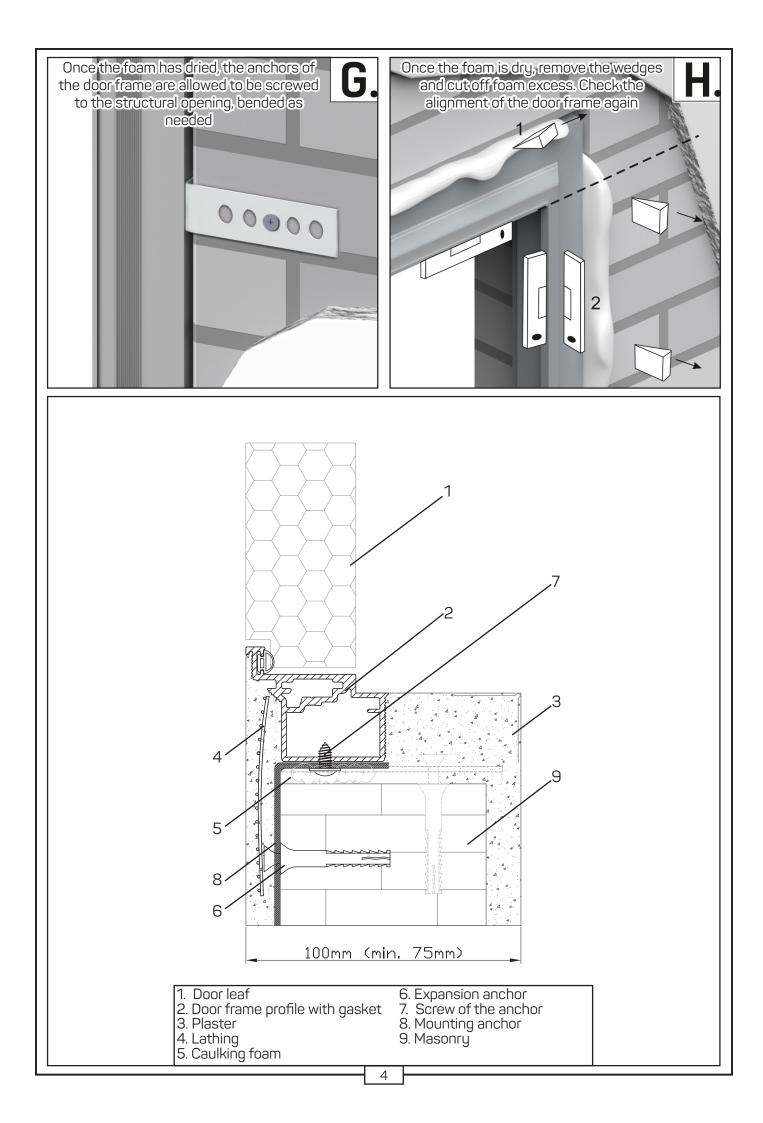

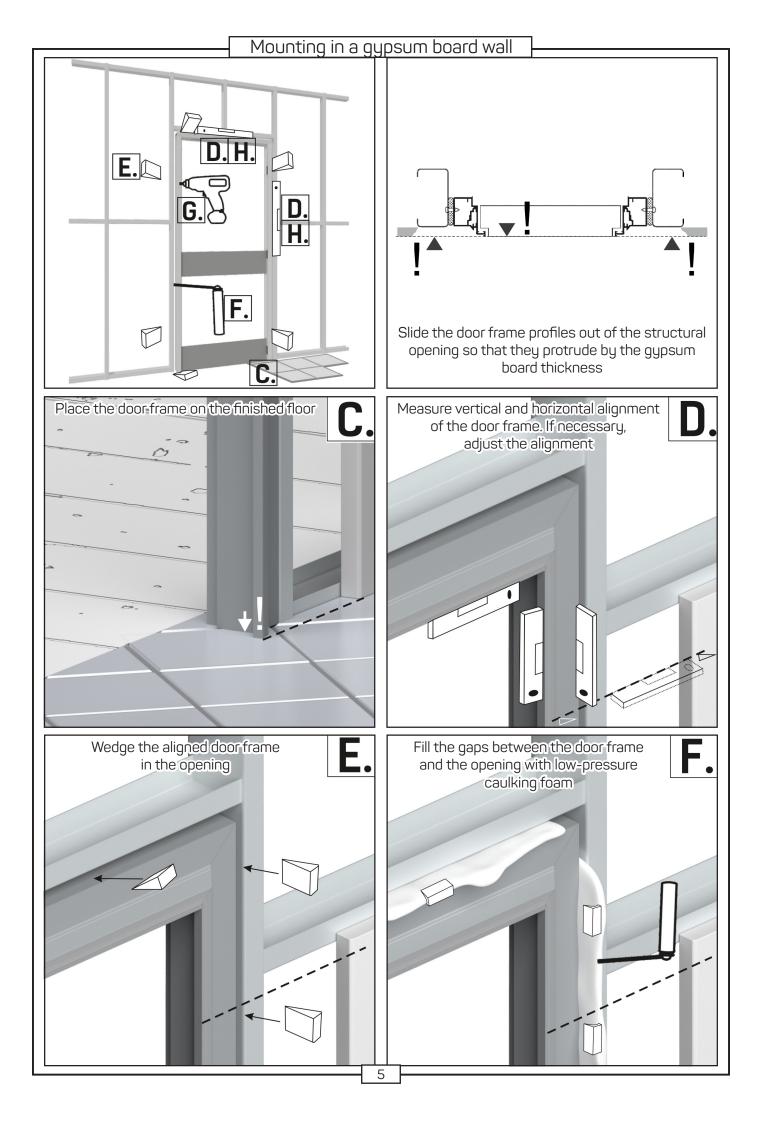

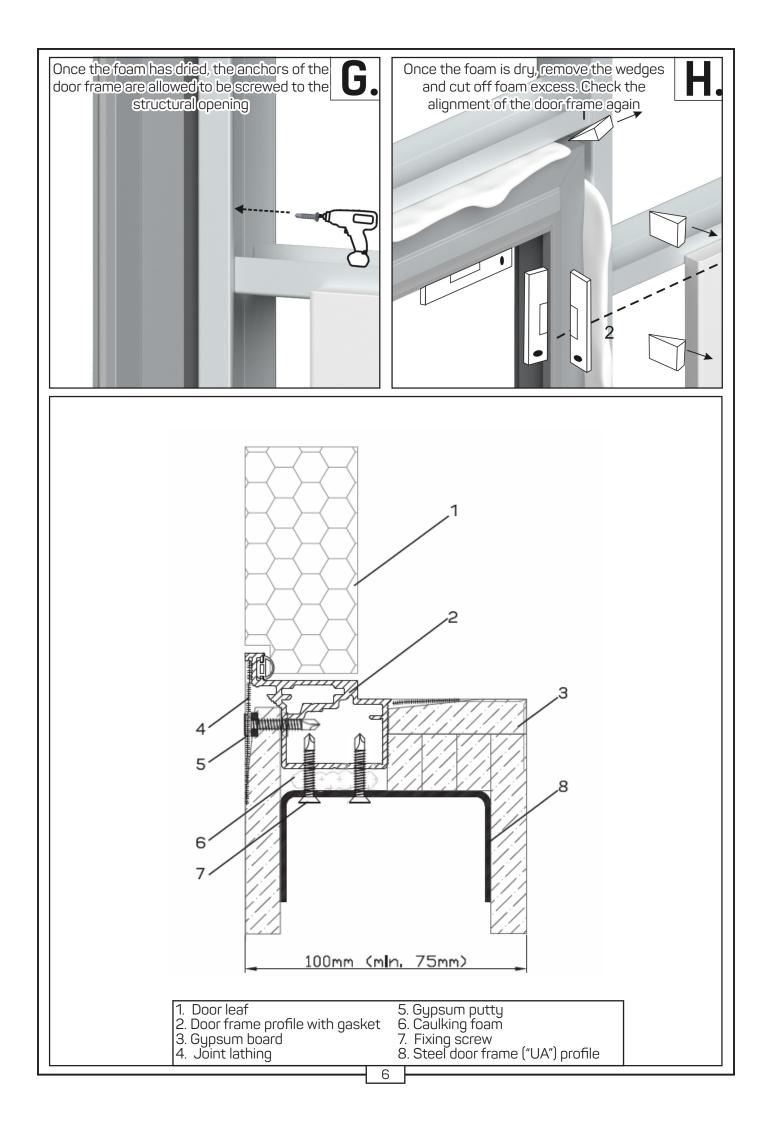


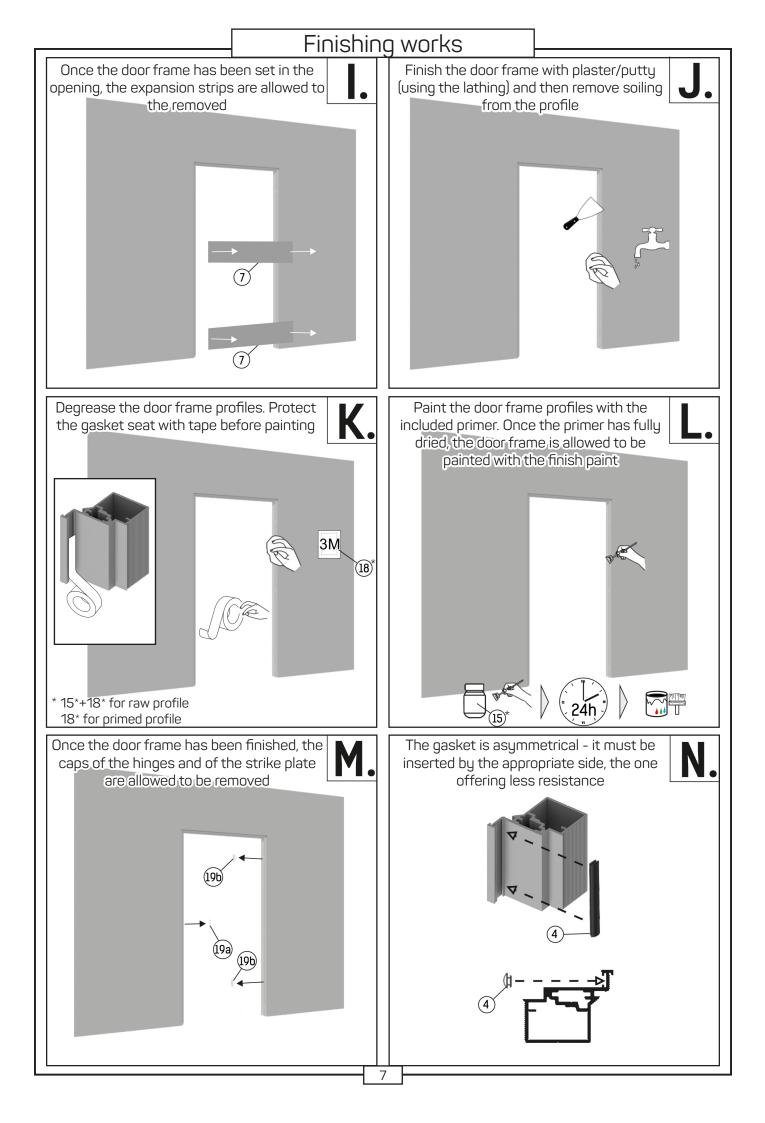

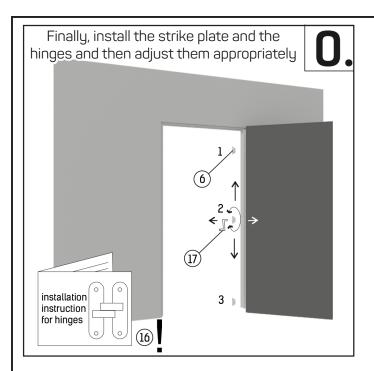



Adjustment instruction of standard used hinges


Installation and adjustment of hinges should be done professionally

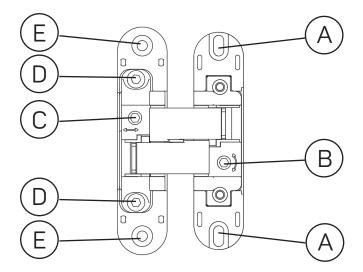

- A Oval opening that serves for fastening the hinge to the leaf and for adjusting it up and down (making the top gap even)
- B Bolt for hinge adjustment right and left (making leaf's side gaps even)
- C Bolt for hinge adjustment front and back (making the leaf flush with wall surface)
- D Bolt serving for unlocking/locking the position set by C bolt
- E Round opening that serves for fastening the hinge to the door frame

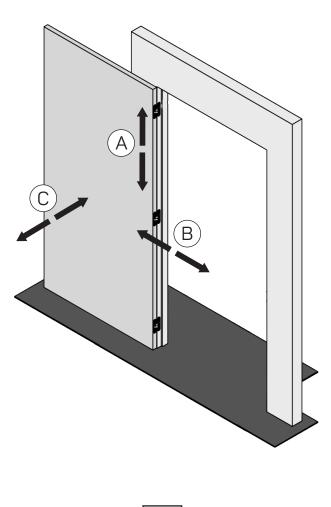

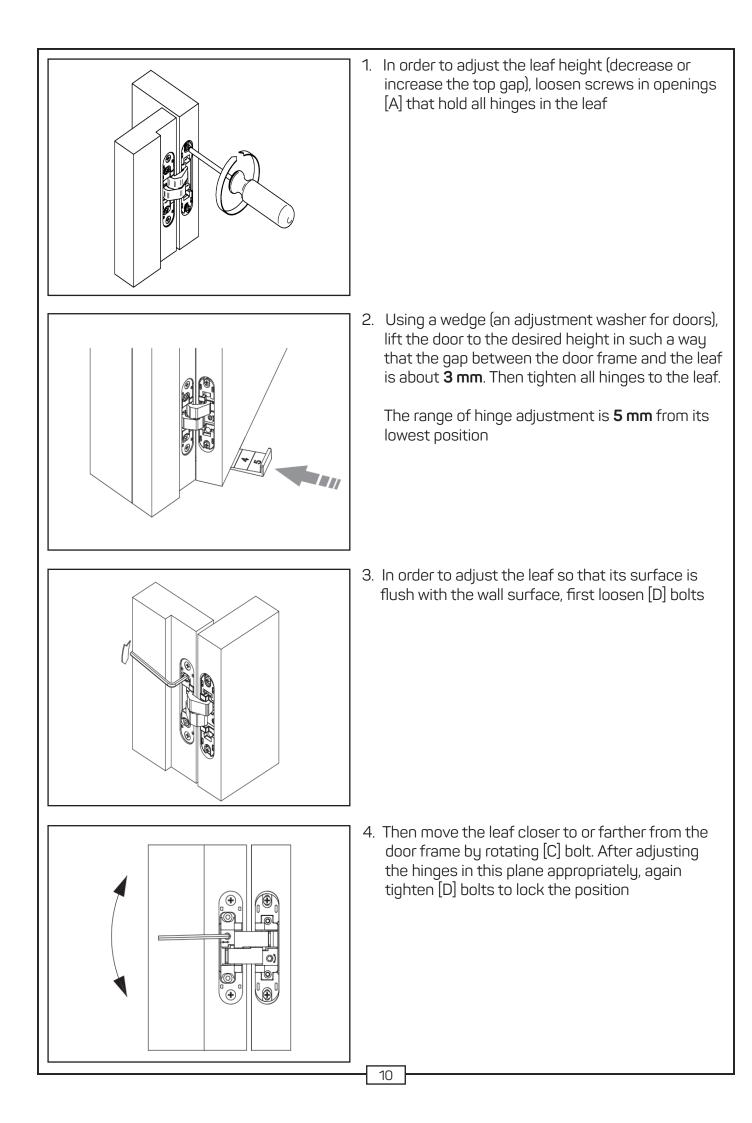


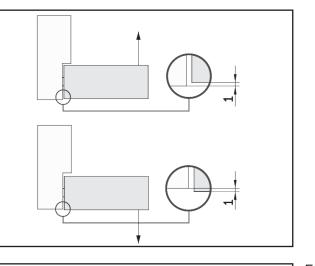

•

The range of hinge adjustment in this plane is +/-1 mm.

 In order to adjust the gaps between the leaf and the door frame on the sides, tighten or loosen [B] bolt in the hinge, which makes the leaf move right or left

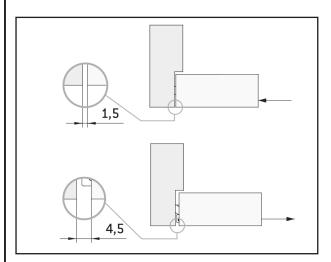

The range of hinge adjustment in this plane is +/-1,5 mm.

Adjust all hinges evenly so that none of them is overloaded, which will prevent their damage.

1 1								
	 	 	 - 1	2	 	 		

EN-1024.01_IWB_CPL-SL-01W

