


Assembly instruction


B01


cassette with concealed door frame for 125 mm drywall single






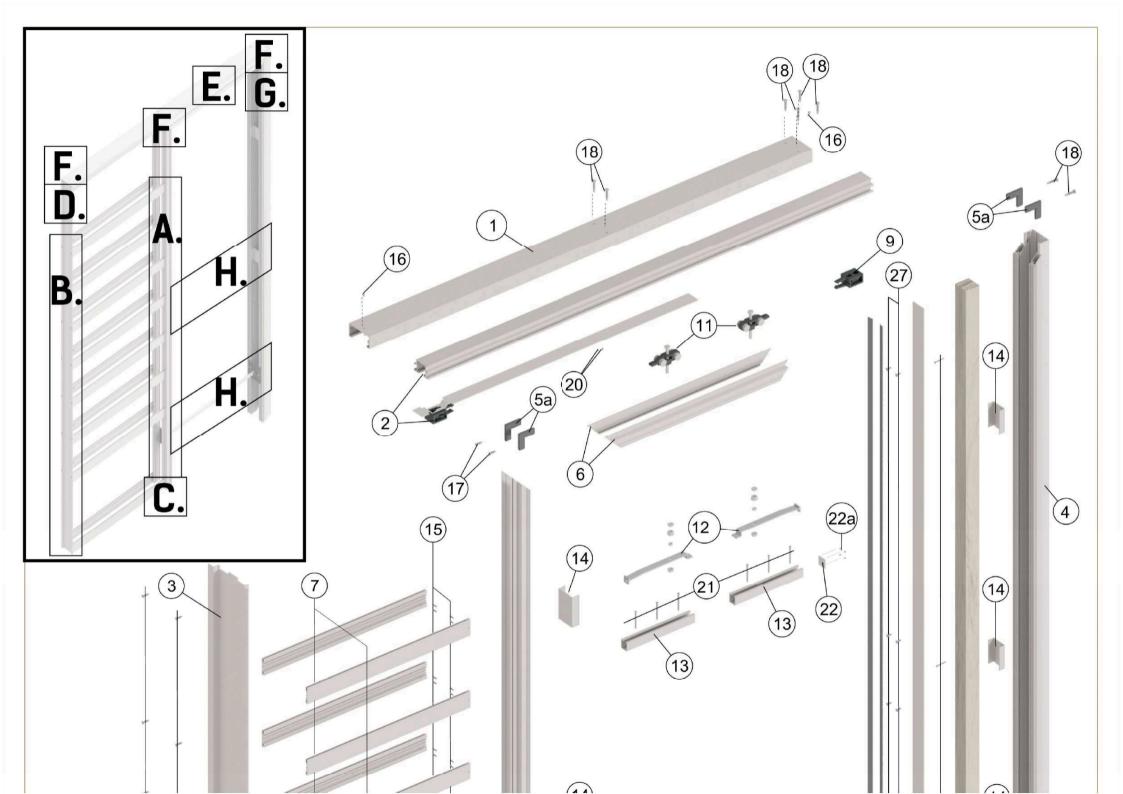

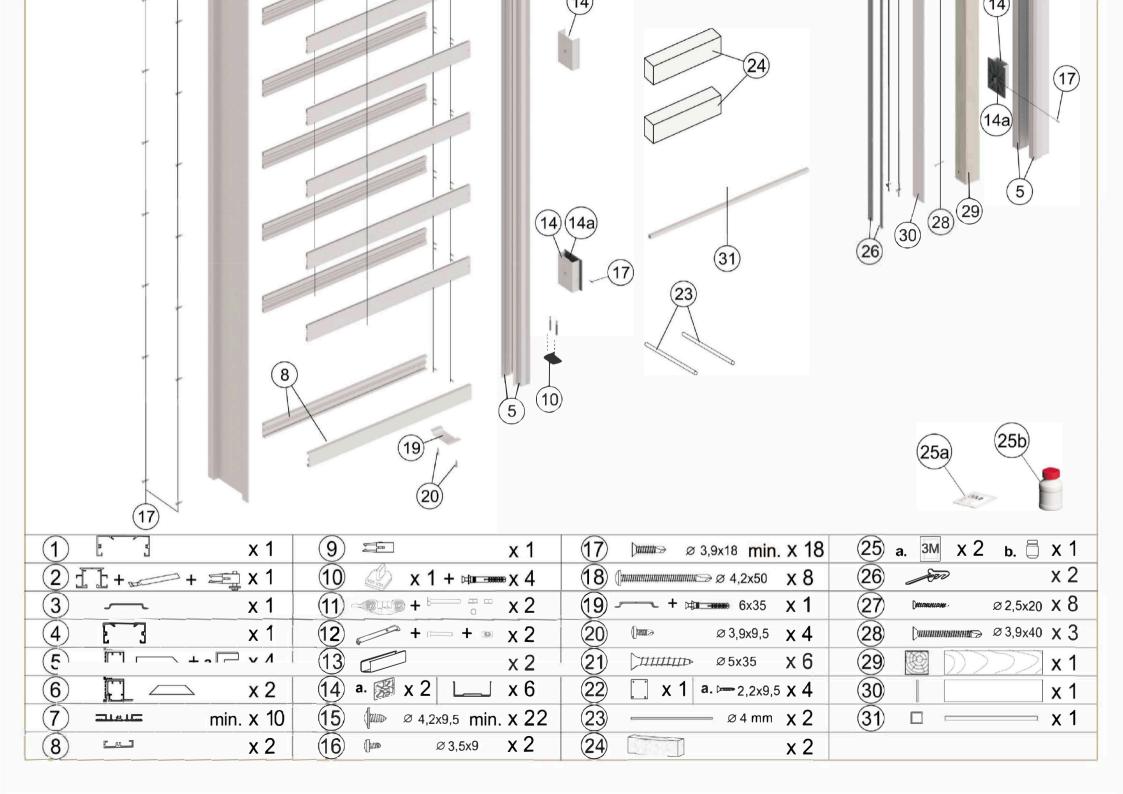

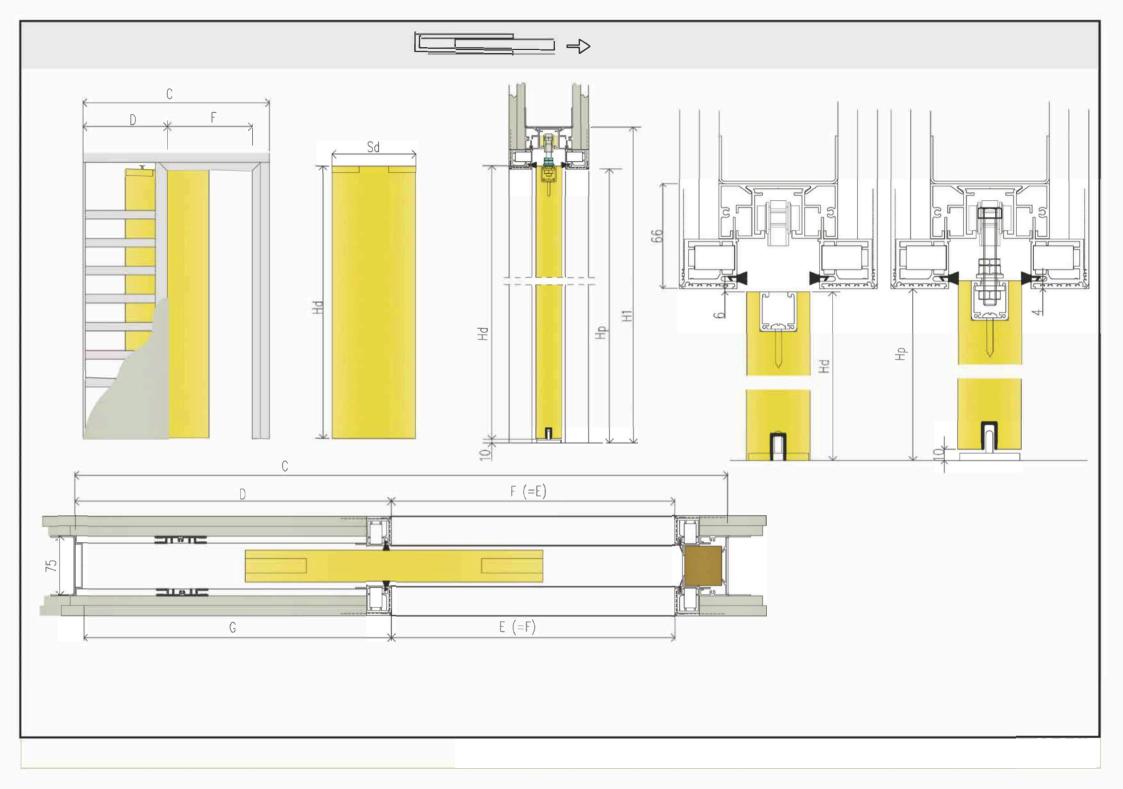

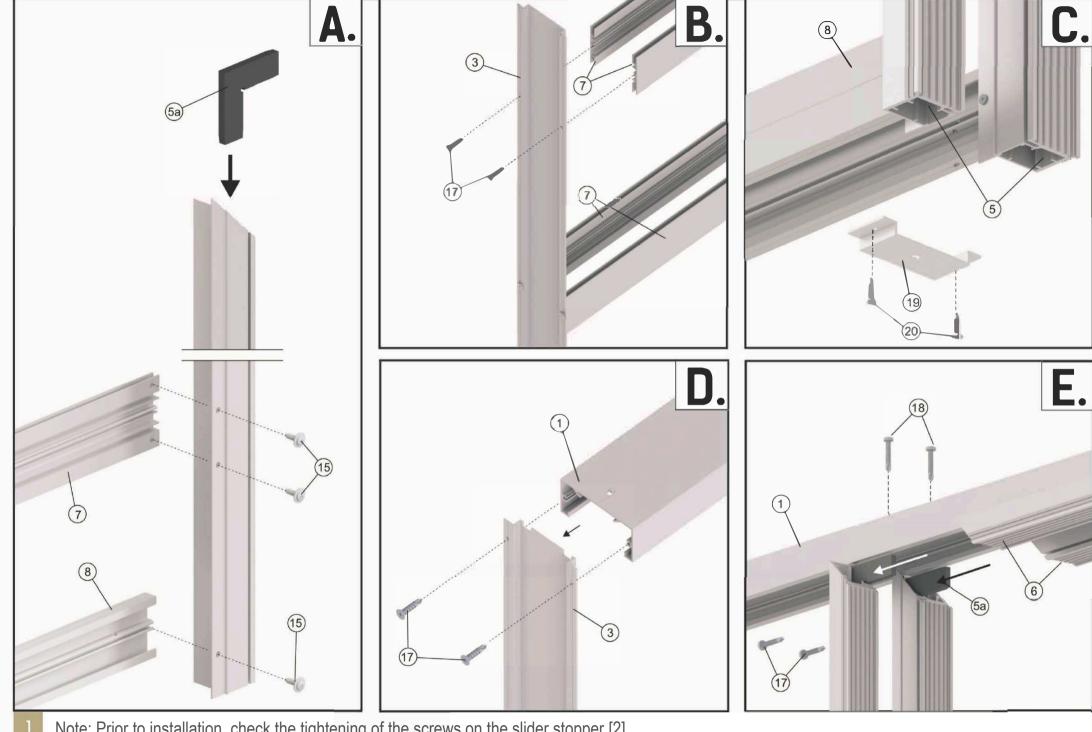

Note: Prior to installation, check the tightening of the screws on the slider stopper [2]

